

6-LED NARROW PROFILE LIGHTHEAD Manual


Wiring / Operation

To + VDC (fuse @ 2A):**RED**

To Ground:.....**BLACK**

For Synchronization**YELLOW**

Connect **YELLOW** wires of all heads together for synchronization.
(All heads should be set to the same pattern)

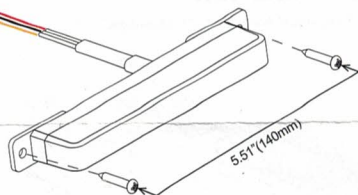

For Simultaneous or Alternating Flash:

1. Apply +VDC to **RED** and **YELLOW** wires simultaneously to enter Grouping mode; lighthouse will display short (single or double) flashes:
 - Single flash = Group1 • Double flash = Group2
2. Remove **YELLOW** wire from +VDC and momentarily apply to +VDC to change Groups:
 - Heads in the same Group flash together.
 - Group1 heads alternate with Group2 heads.

For Flash Patterns:

Momentarily apply +VDC to **YELLOW** wire:

- once for next pattern
- quick three times to reset to FP#1

NOTE:

1. This unit may not be factory-set at FP#1.
2. Please double check lighthouse orientation before mounting for FP# 22.

Flash Patterns


1	Double [R65]	13	Single H/L (split)
2	Single [2Hz]	14	Single [SAE]
3	Triple [2Hz]	15	Double [SAE]
4	Quad [2Hz]	16	Quad [SAE]
5	Random	17	Quint [SAE]
6	Single (split)	18	Mega
7	Double (split)	19	Ultra [SAE]
8	Quad (split)	20	Single-Quad
9	Quint (split)	21	Single H/L
10	Mega (split)	22	Steady Half
11	Ultra (split)	23	Steady All
12	Single-Quad (split)		

*split = Left alternating Right


6-LED NARROW PROFILE LIGHTHEAD Manual

Installation

Universal Bracket (Multi-Angle)

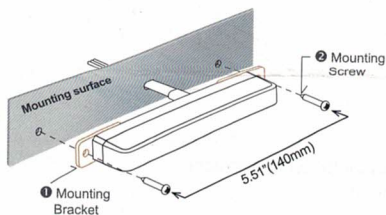

OR

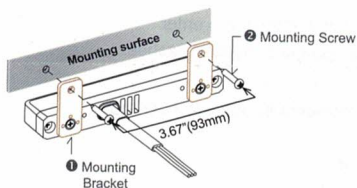

NOTE: Please mount the lighthead according to the mounting style purchased.

* Graphs only show horizontal illustration.


▼ Horizontal Mount



▼ Vertical Mount



L-Bracket (Front / Rear)

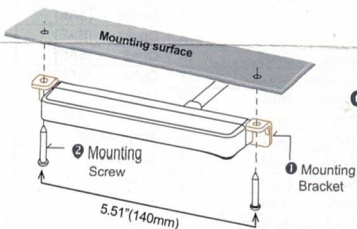

OR

